

Vinyl Application Guide

Floor Application


1

Wipe the wall, removing dust and any obvious contaminants.




2

Lay the graphic image side down on a flat surface. Pull back about 6 inches of the liner. Sharply crease the liner.

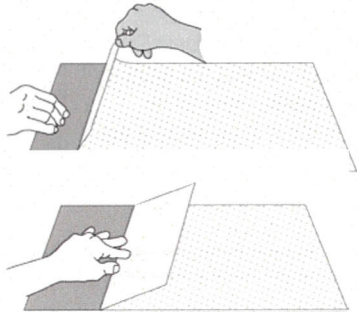


3

Bring the graphic to the wall and align it along the vertical edge. Use finger pressure to tack it in place. DO NOT USE TAPE

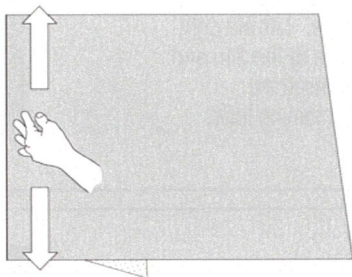


4

Brush from the center to the bottom edge.

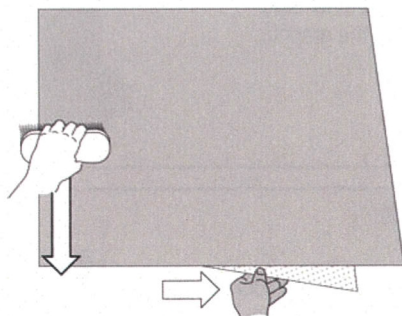


5

Return to the center and brush to the top edge.

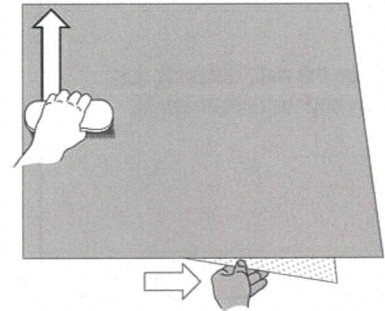

6

Move the brush over a couple of inches and continue stroking center to top, center to bottom, as the helper pulls the liner away from the film.

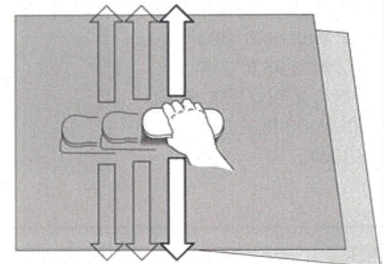

7

Re brush the outer 3 inches of the entire graphic, using a small circular motion, to ensure good edge adhesion.

